


内孔车刀(螺钉式) Boring Bars(S-type)


STWCR/L

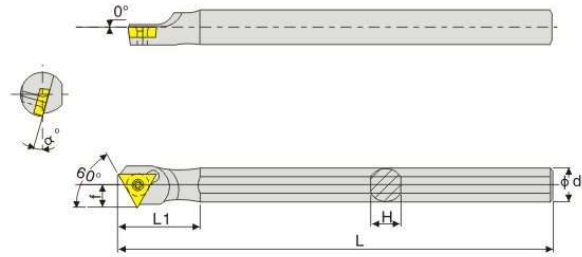

型号 Model	刀片 Insert 	适用条件 Applicable conditions							配件 Accessories	
		ϕ Dmin	ϕ D	f	L	L1	H	α°	螺丝 Screw	扳手 Wrench
S08K-STWCR/L09	TC□□0902□□	ϕ 11	ϕ 8	5.5	125	25	7	12°	M2.2 × 5	T7
S10K-STWCR/L11	TC□□1102□□	ϕ 14	ϕ 10	8	125	25	9	10°	M2.5 × 6	T8
S12M-STWCR/L11		ϕ 16	ϕ 12	9	150	30	11	8°		
S16Q-STWCR/L11		ϕ 20	ϕ 16	11	180	30	15	6°		
S20R-STWCR/L11		ϕ 25	ϕ 20	13	200	35	19	4°		
S25S-STWCR/L16	TC□□16T3□□	ϕ 32	ϕ 25	17	250	45	24	6°	M4 × 10	T15

内孔车刀(螺钉式) Boring Bars(S-type)

SSSCR/L

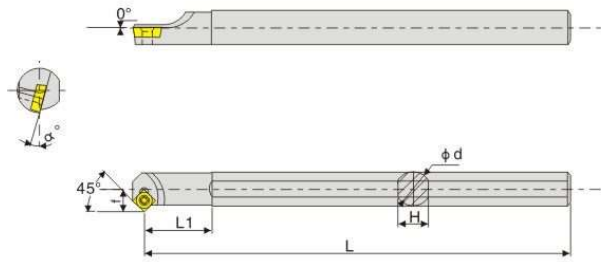

型号 Model	刀片 Insert 	适用条件 Applicable conditions							配件 Accessories	
		ϕ Dmin	ϕ D	f	L	L1	H	α°	螺丝 Screw	扳手 Wrench
S12M-SSSCR/L09	SC□□09T3□□	ϕ 16	ϕ 12	8.5	150	30	11	12°	M4 × 8	T15
S16Q-SSSCR/L09		ϕ 22	ϕ 16	11.5	180	35	15	10°		
S20R-SSSCR/L09		ϕ 26	ϕ 20	13.5	200	40	19	8°	M4 × 10	
S25S-SSSCR/L09		ϕ 31	ϕ 25	16	250	40	24	6°		
S32T-SSSCR/L09		ϕ 38	ϕ 32	19.5	300	45	30	4°		

