
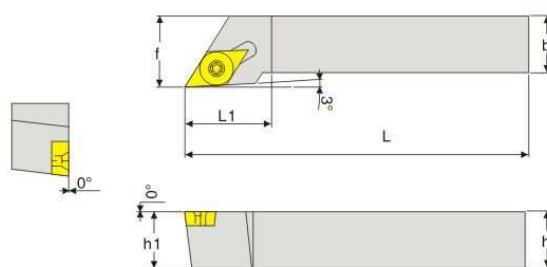


# 外圆刀(螺钉式) External Turning Holder(S-type)



## SDJCR/L

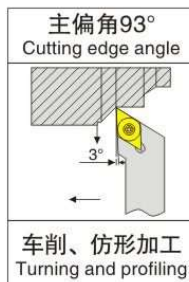

型号 Model	刀片 Insert 	适用条件 Applicable conditions						配件 Accessories	
		h	b	L	L1	h1	f	 螺丝 Screw	 扳手 Wrench
SDJCR/L1010E07	DC□□T0702□□	10	10	70	12	10	15	M2.5×6	T8
SDJCR/L1212F07		12	12	80	16	12	15		
SDJCR/L1616H07		16	16	100	20	16	18		
SDJCR/L1212F11	DC□□T11T3□□	12	12	80	16	12	15	M4×8	T15
SDJCR/L1616H11		16	16	100	20	16	24		
SDJCR/L2020K11		20	20	125	20	20	24	M4×10	
SDJCR/L2525M11		25	25	150	23	25	29		
SDJCR/L3232P11		32	32	170	23	32	40		
SDJCR/L4040R11		40	40	200	25	40	50		

# 外圆刀(螺钉式) External Turning Holder(S-type)

## SDACR/L

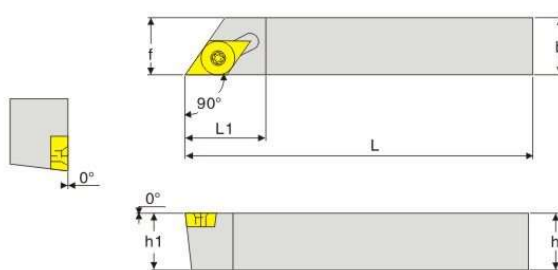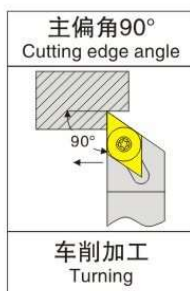

型号 Model	刀片 Insert 	适用条件 Applicable conditions						配件 Accessories	
		h	b	L	L1	h1	f	 螺丝 Screw	 扳手 Wrench
SDACR/L0808K07	DC□□0702□□	8	8	125	15	8	8	M2.5×6	T8
SDACR/L1010K07		10	10	125	15	10	10		
SDACR/L1212K07		12	12	125	15	12	12		
SDACR/L1212K11	DC□□11T3□□	12	12	125	22	12	12	M4×8	T15
SDACR/L1616K11		16	16	125	22	16	16		
SDACR/L2020K11		20	20	125	22	20	20	M4×10	
SDACR/L2525M11		25	25	150	22	25	25		